




SeceuroGlide Sectional Plus Fitting Instructions




Fitter's Information Pack - SeceuroGlide Sectional Plus

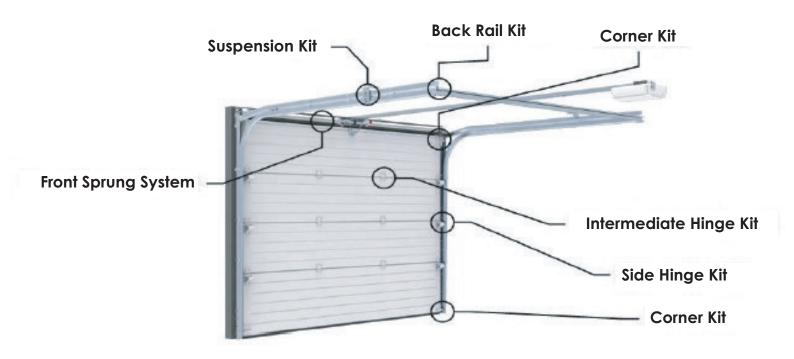


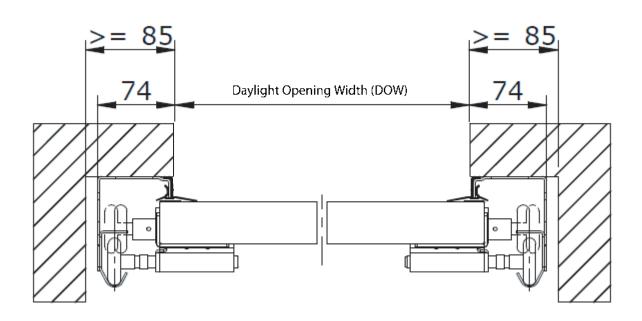


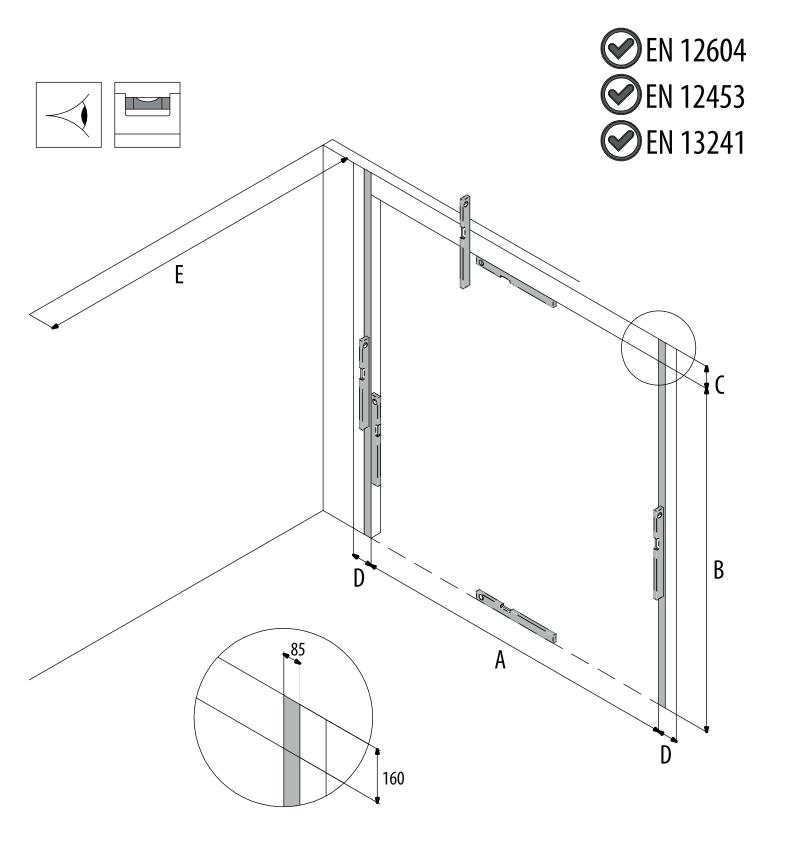



Α	В	С	D	E
DLW	DLH	FHR	FSR	FMD
Daylight Width	Daylight Height	Free Head Room	Free Side Room	Free Mounting Dept

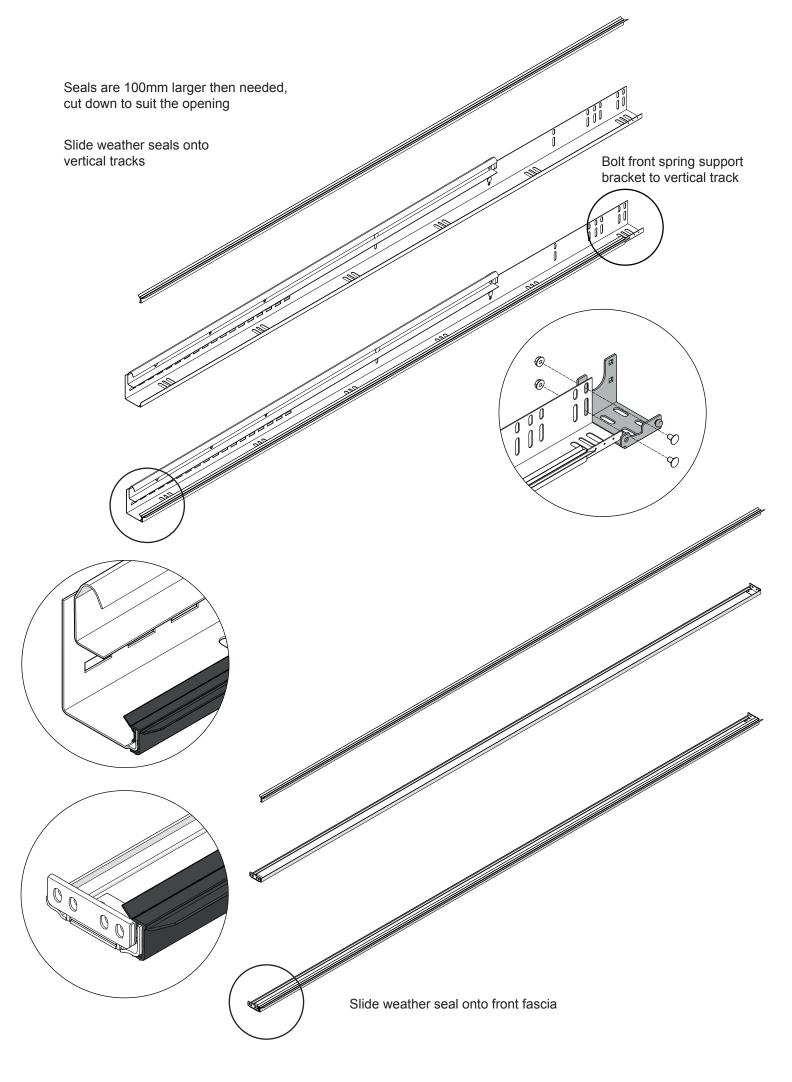


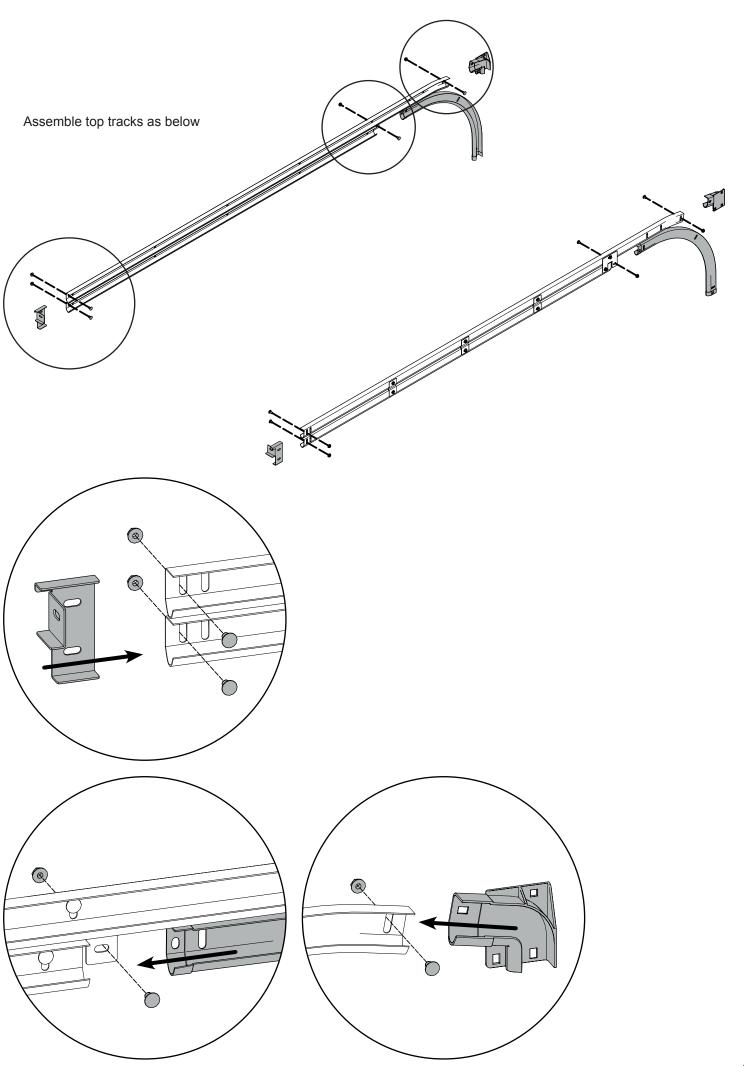


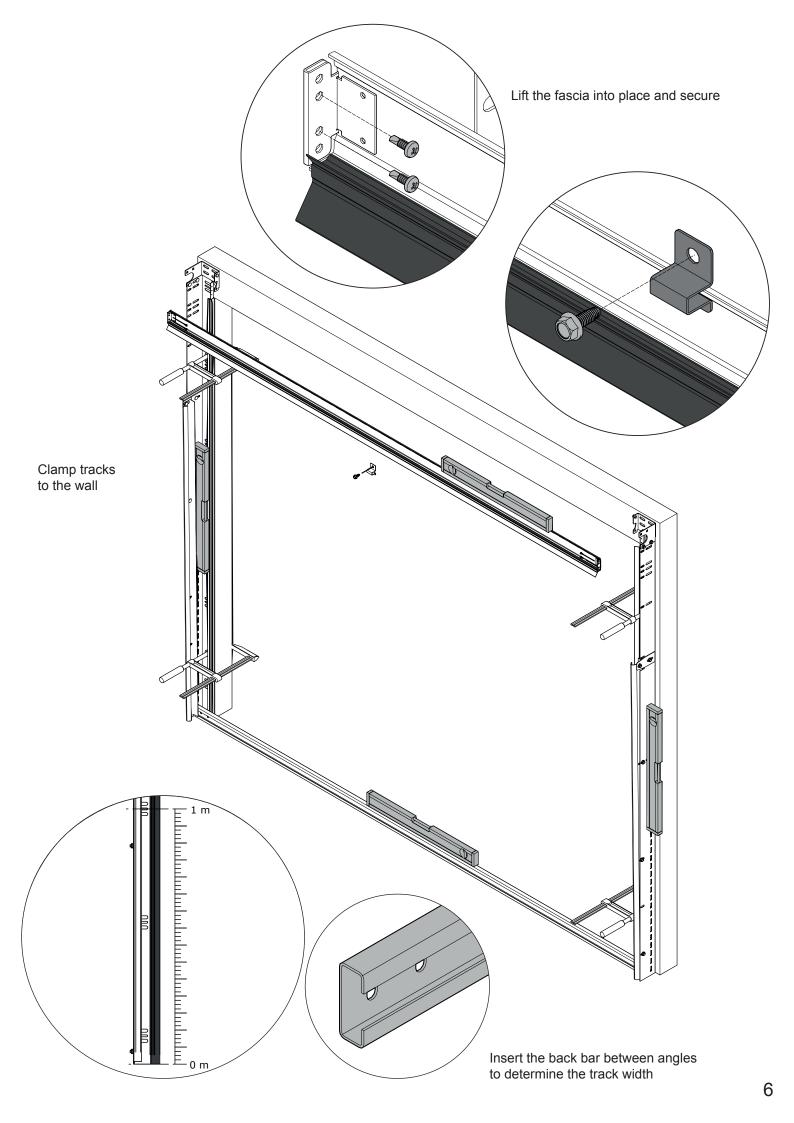


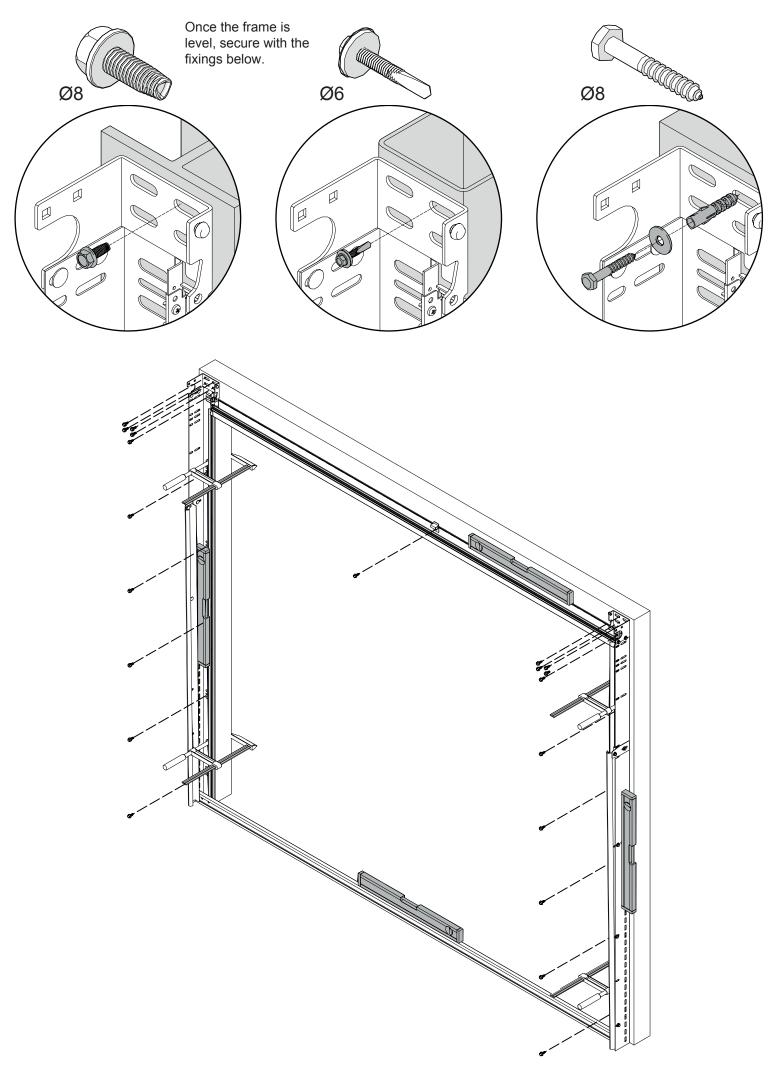


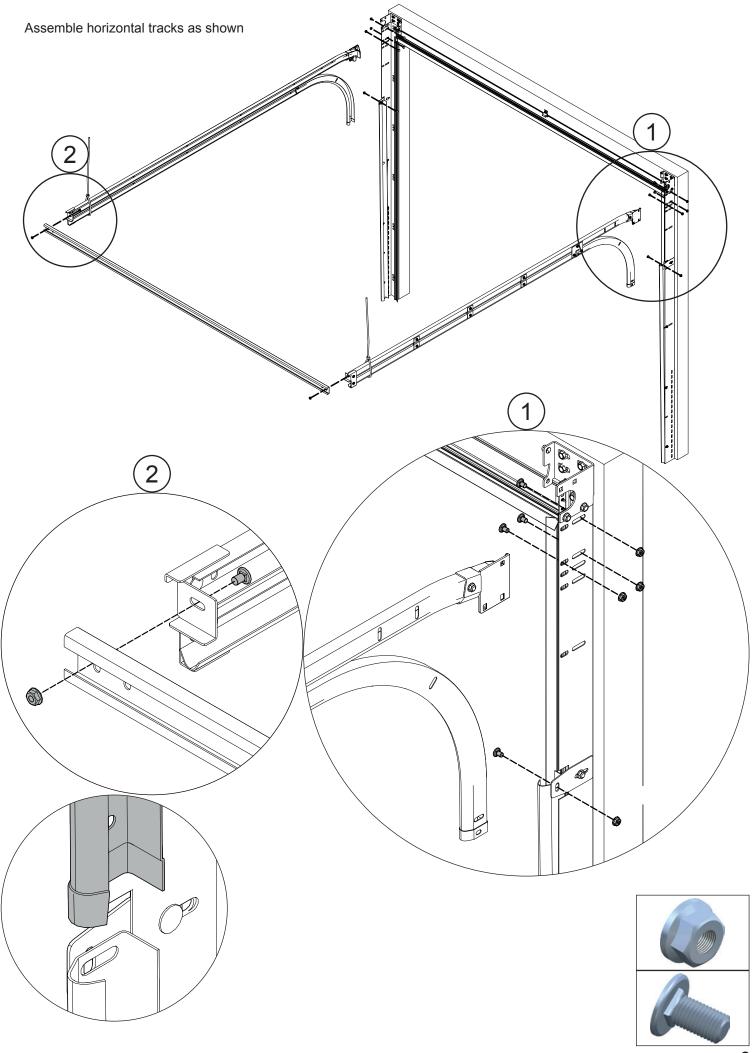


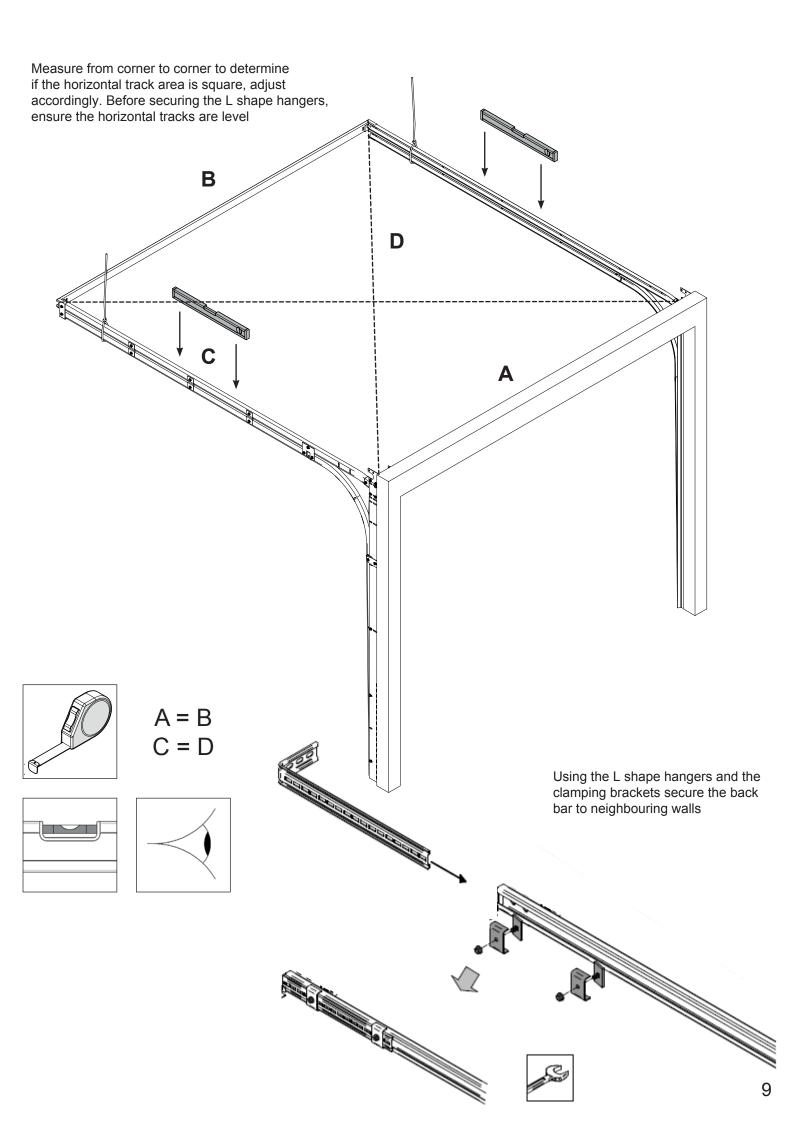


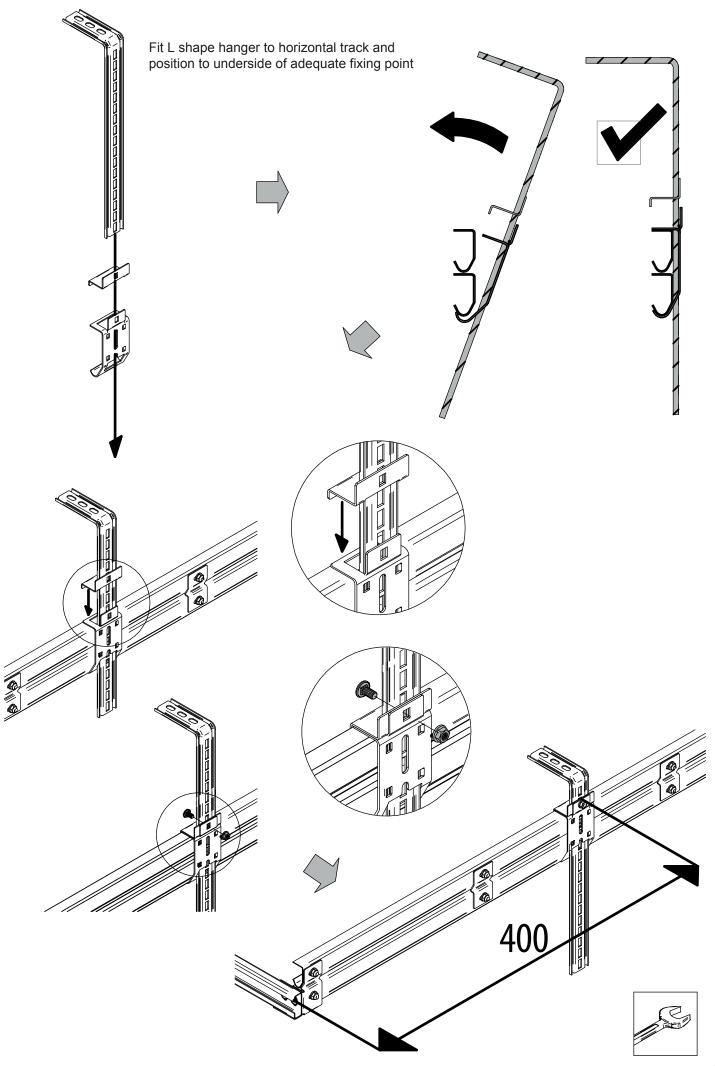


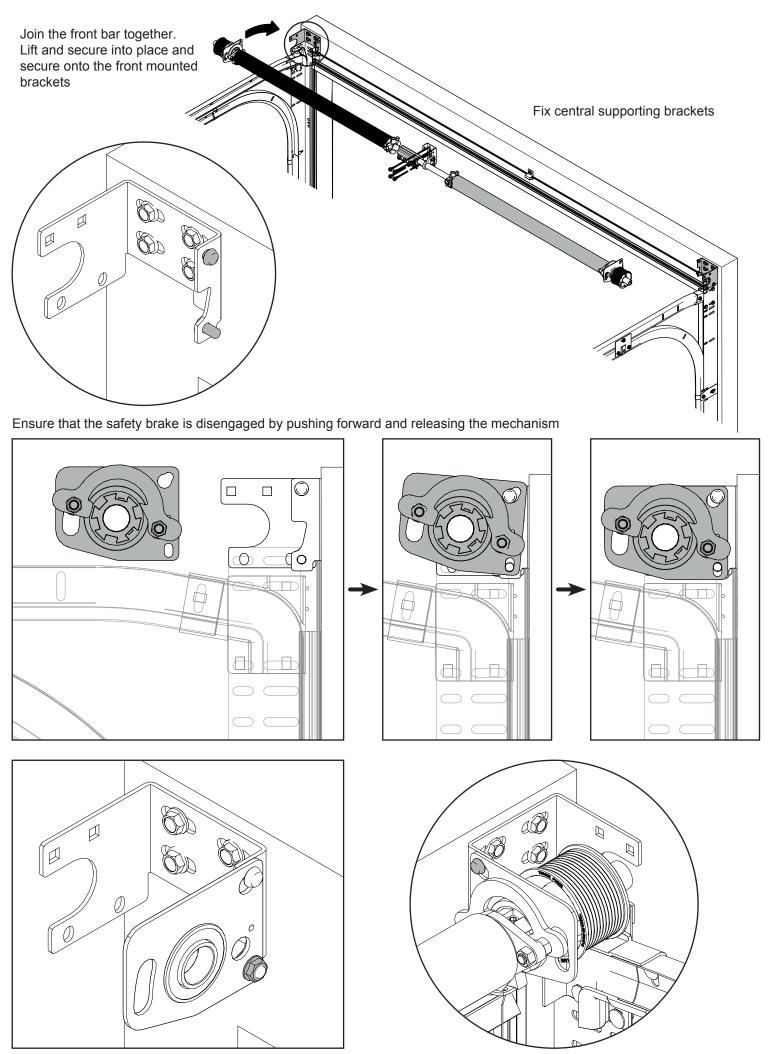

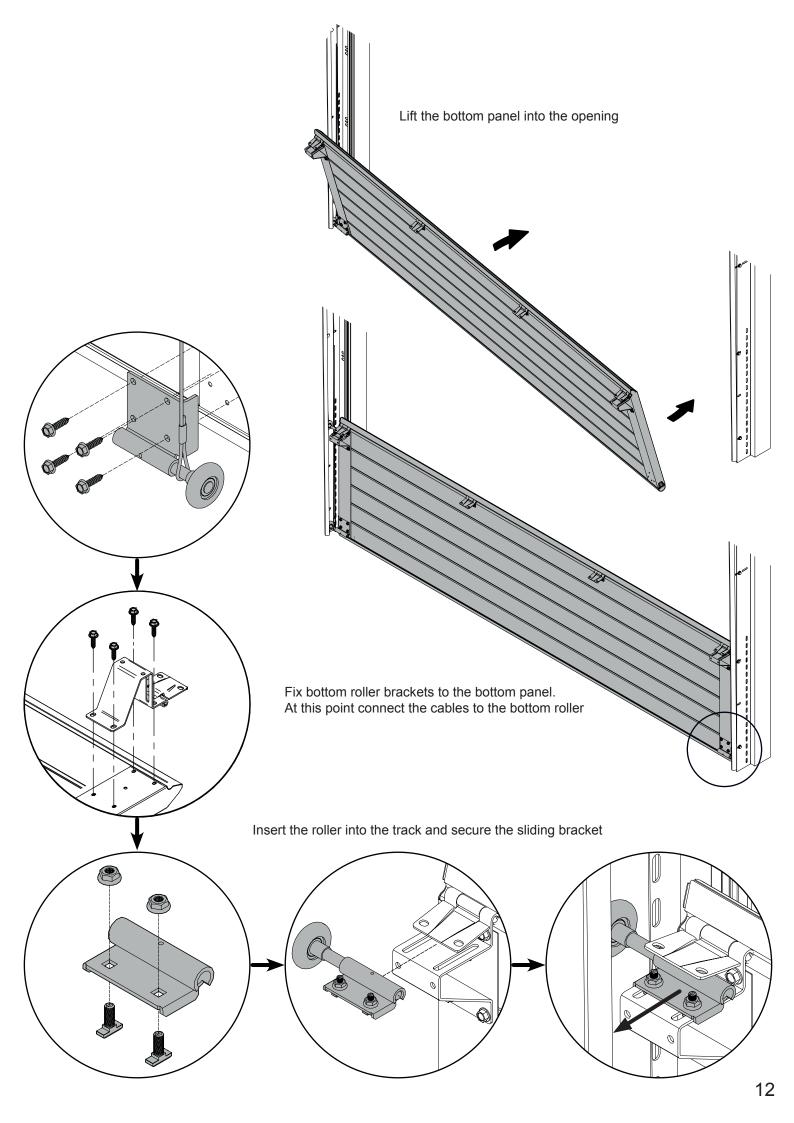


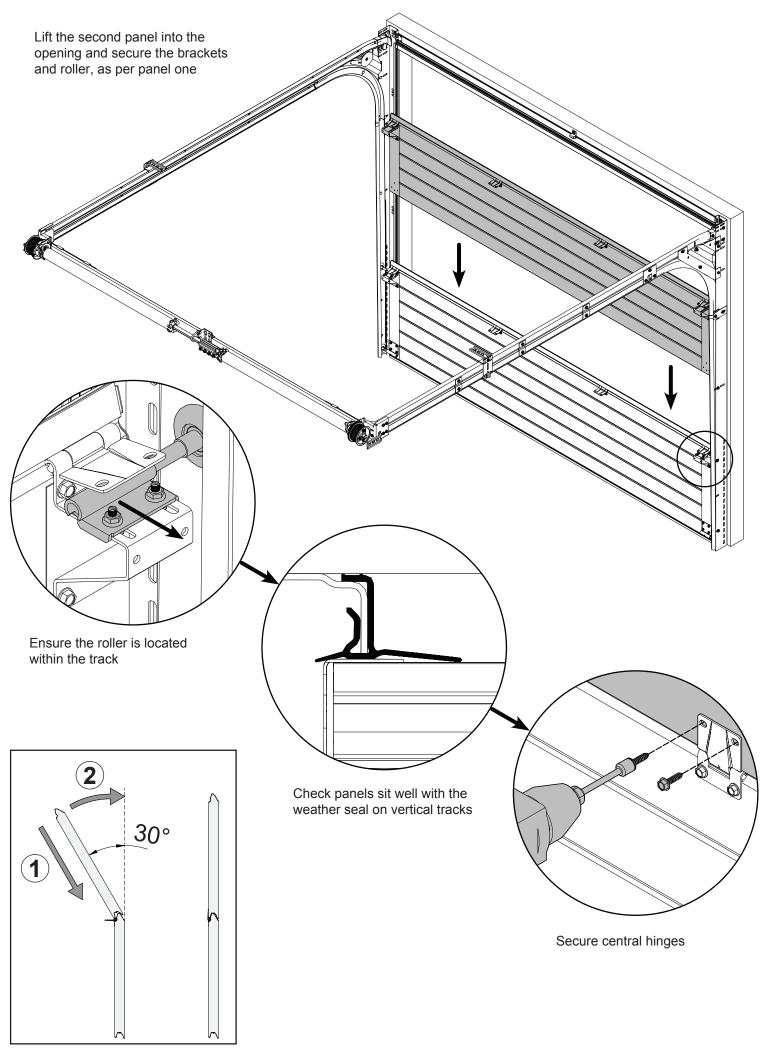


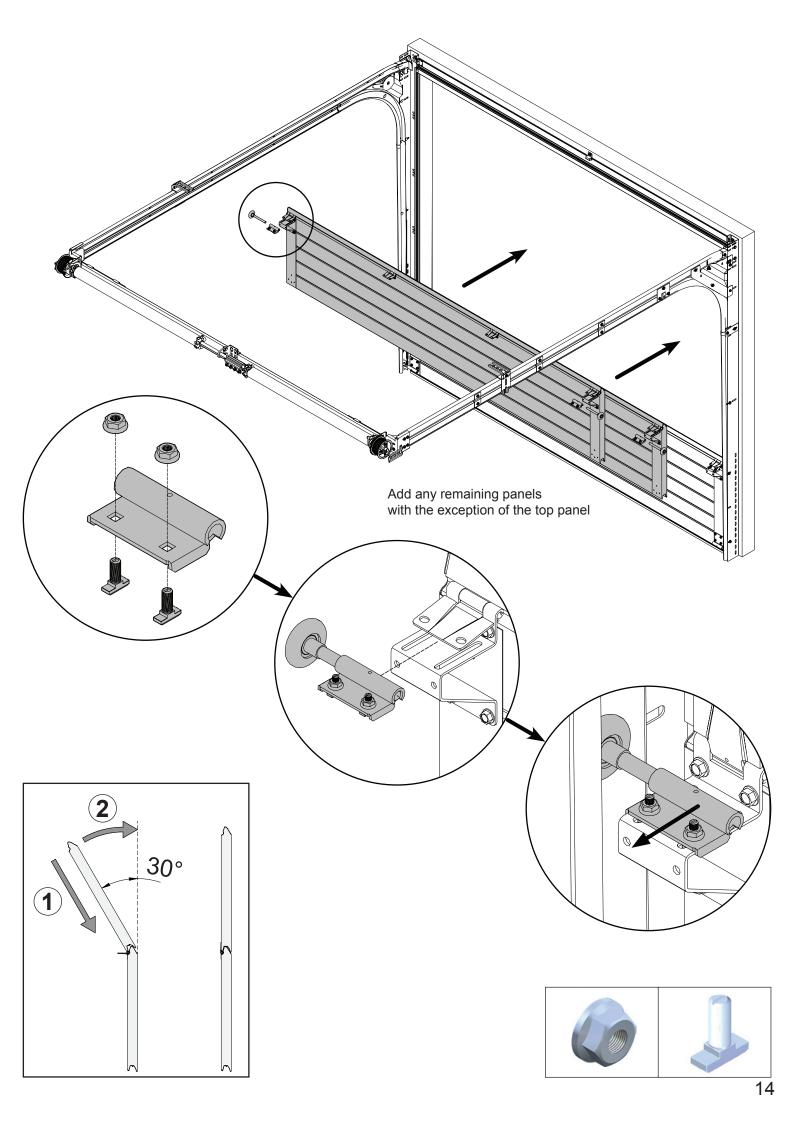


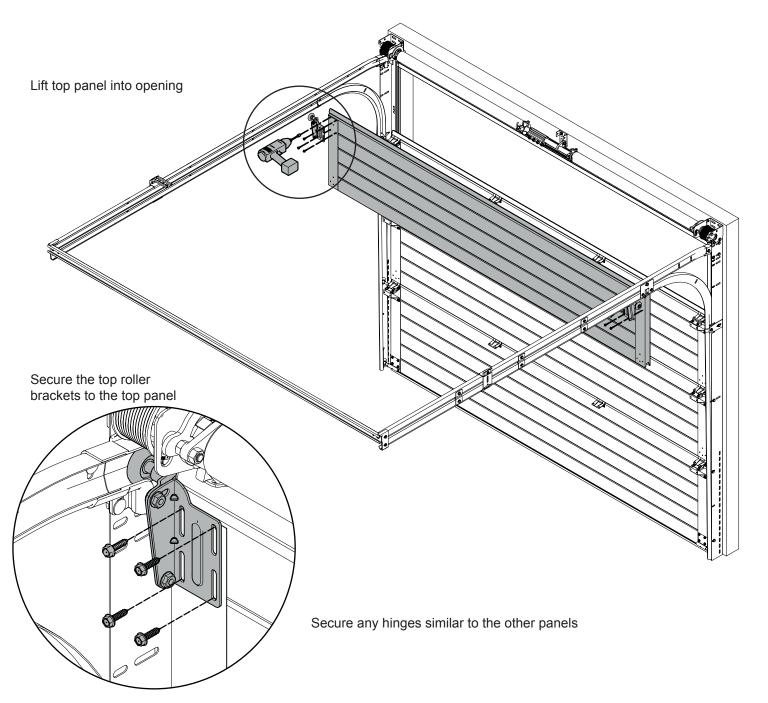



Adjust the top roller for manual or electric operation

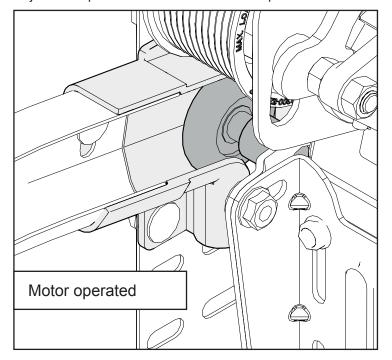

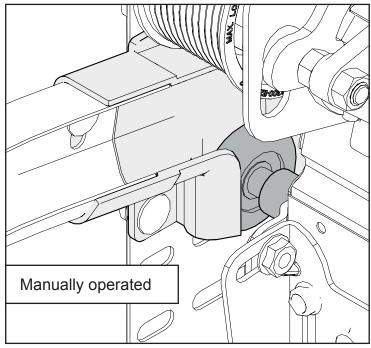

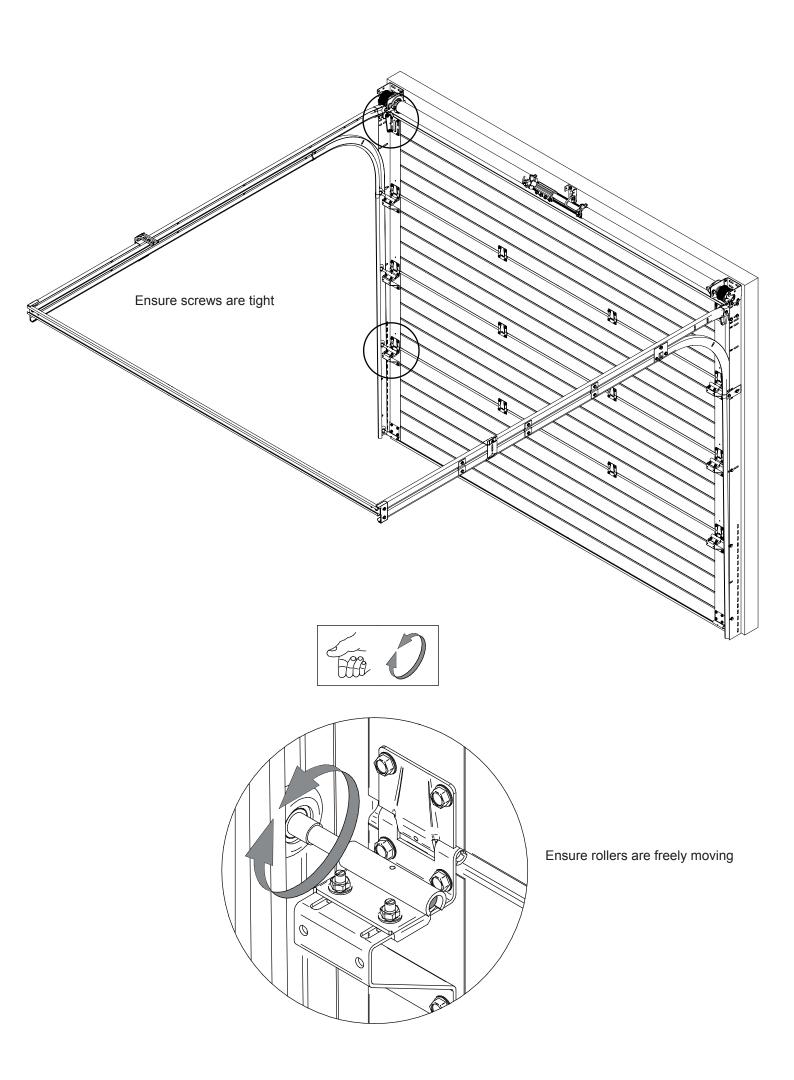

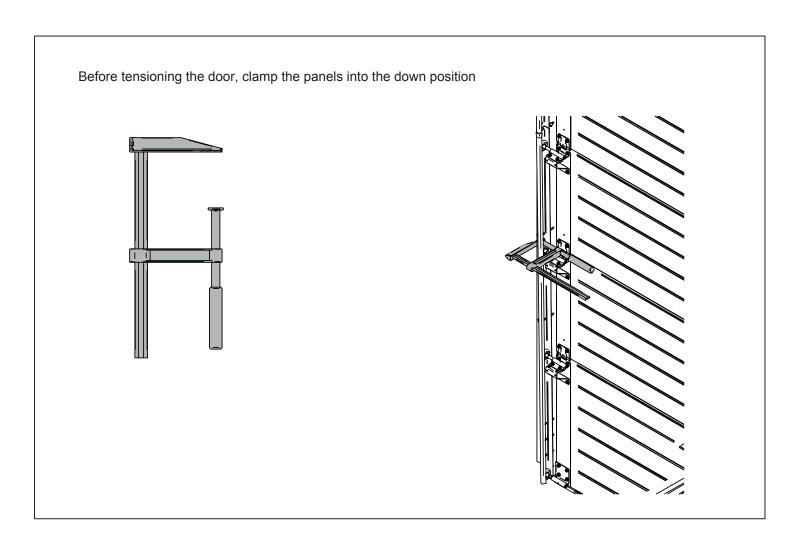


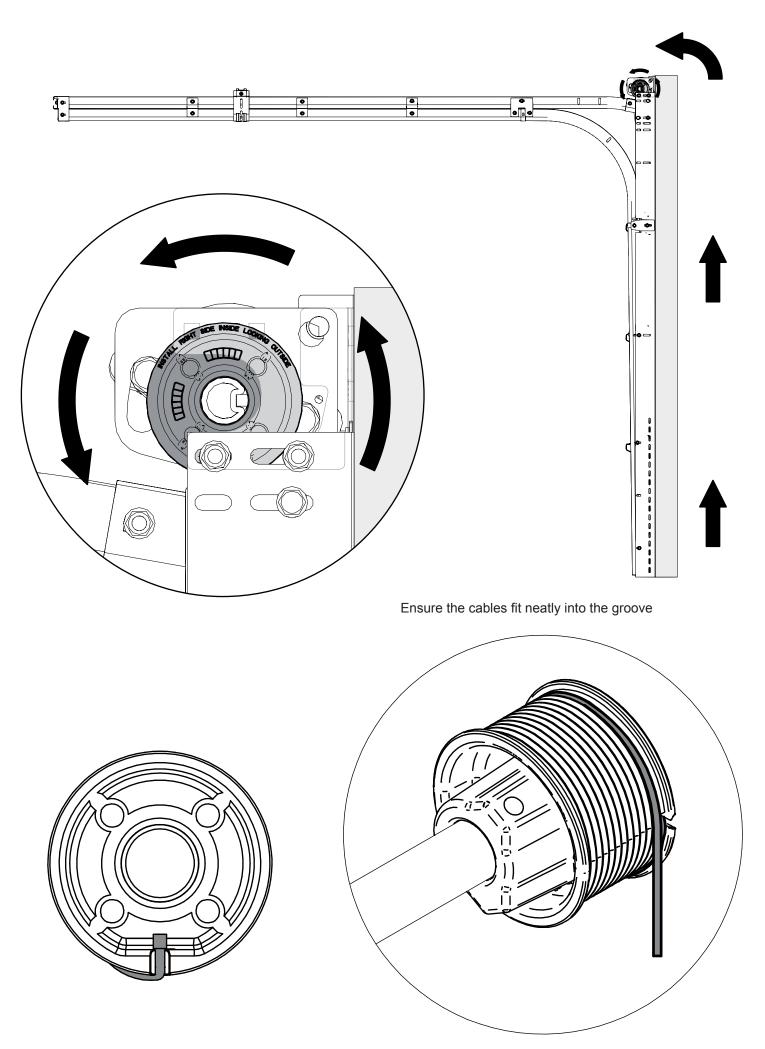



Check paperwork or spring tension label located on the spring for number of turns.

When tensioning the springs take great care, improper tensioning could lead to the tensioning bars striking your body.




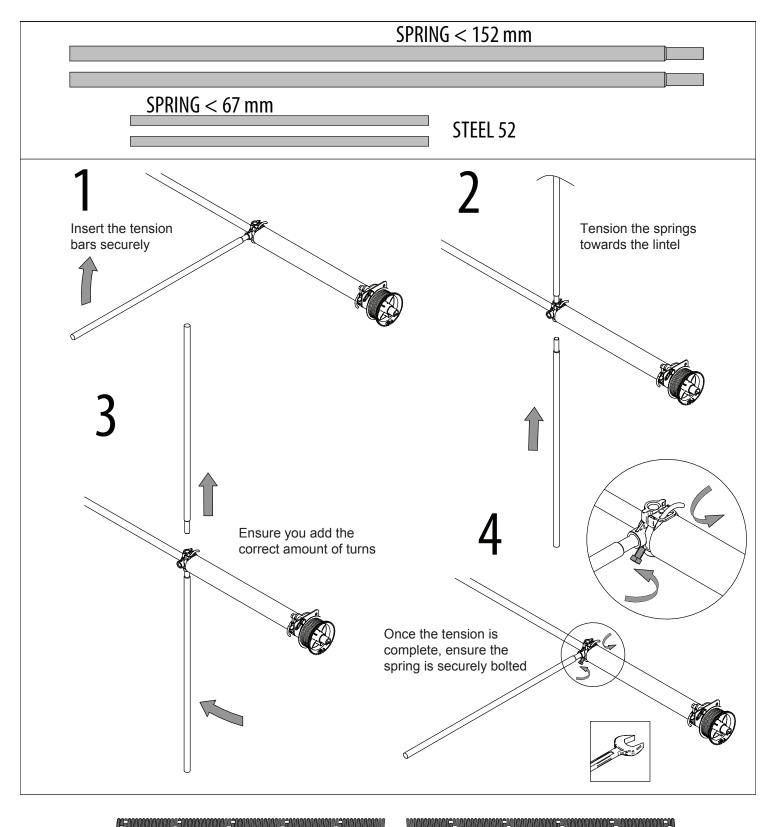

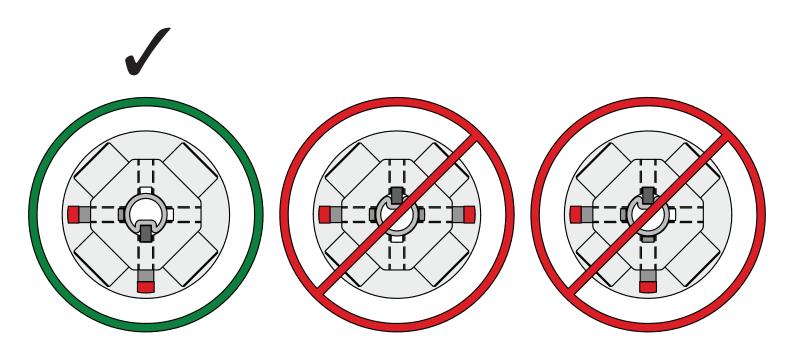

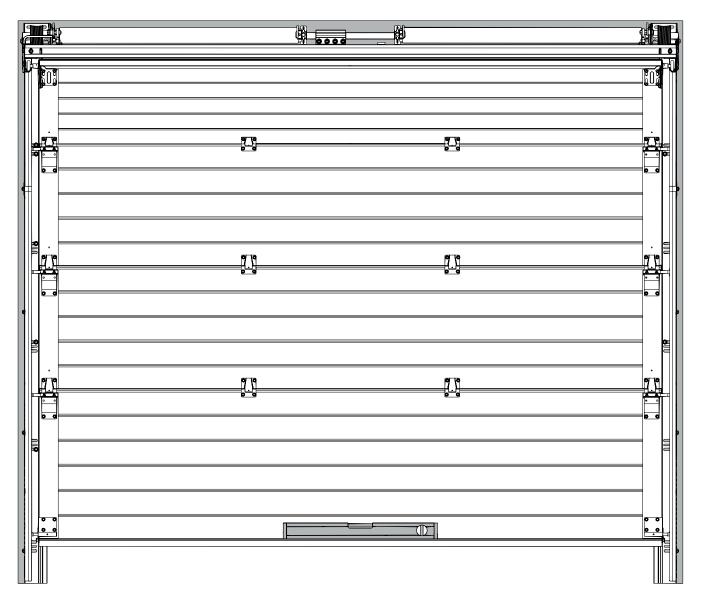


 Once the tension is in place, check that the door is level. Check the balance and adjust if necessary



Reveal Options

Executive Framing Kit

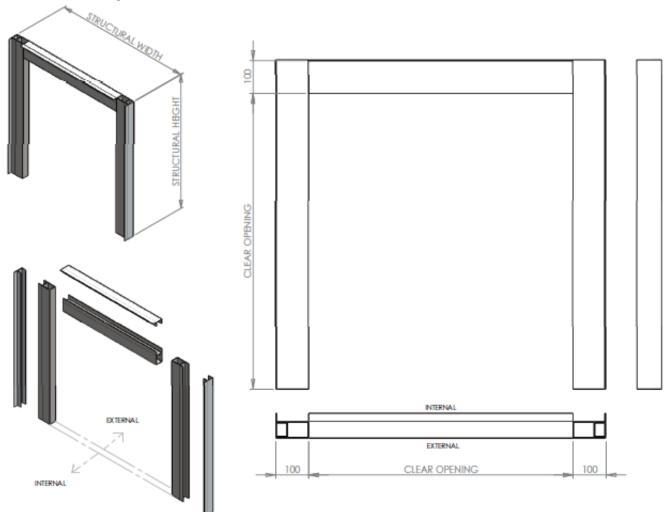



Position 5 per side, secure each bracket with 2 M8 x 18 bolts and M8 serrated nuts

