


Adjusting RTS Motor Limit Positions




NOTE: the following procedure will only work if the limit is accessible, otherwise please refer to erasing the motor memory on page 28.

1 Adjustment of the lower limit position

Press the Down button and send the product to the existing lower limit position.

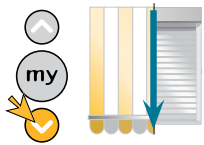


Press and hold the Up and Down buttons until the product Shunts.

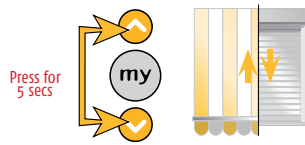


Press for 5 secs

Adjust to the correct position using either the Up or Down button.

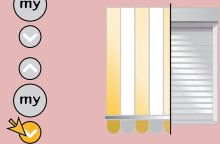

Press and hold the Stop button until the product Shunts.

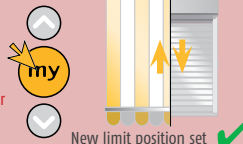


Press for 3 secs


New limit position set ✓

2 Adjustment of the upper limit position - Not applicable for Orea

Press the Up button and send the product to the existing upper limit position.

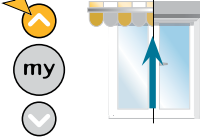


Press and hold the Up and Down buttons until the product Shunts.

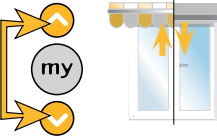


Press for 5 secs

Adjust to the correct position using either the Up or Down button.

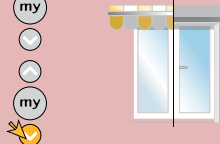

Press and hold the Stop button until the product Shunts.

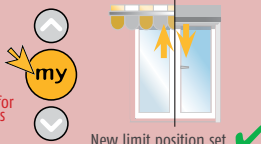

Press for 3 secs

New limit position set ✓


"MY" Position Programming




NOTE: the following procedure will only work after programming has been completed.

1 Setting an intermediate position


Use the Up or Down button to move the product towards the desired intermediate position.

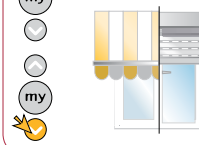

Stop the product at the desired intermediate position.

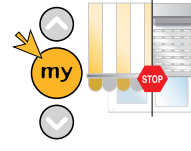

Press and hold the Stop button until the product Shunts.

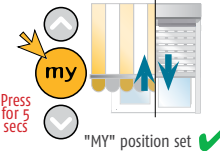


Press for 5 secs


"MY" position set ✓

2 Deleting an Intermediate position

Send the product to the intermediate position by pressing the Stop button

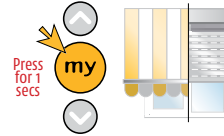

When the product has reached the intermediate position and stopped, press and hold the Stop button until there is a Shunt.

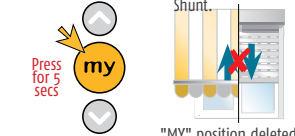

Press for 5 secs

"MY" position deleted ✓

3 Using the intermediate position

The product must be stationary, but can be at any position. Press briefly the Stop button to initiate the intermediate or 'my' position. The product will automatically move to the IP or 'my' position and stop.



Press for 1 secs



If an intermediate position has been set and the awning is controlled by a Somfy RTS sun sensor, then the awning will only extend to the IP position. Remove the IP function if the end user wants the awning to fully extend.



IP = ✓



IP = ✗

